


# TH-T-FW10AD

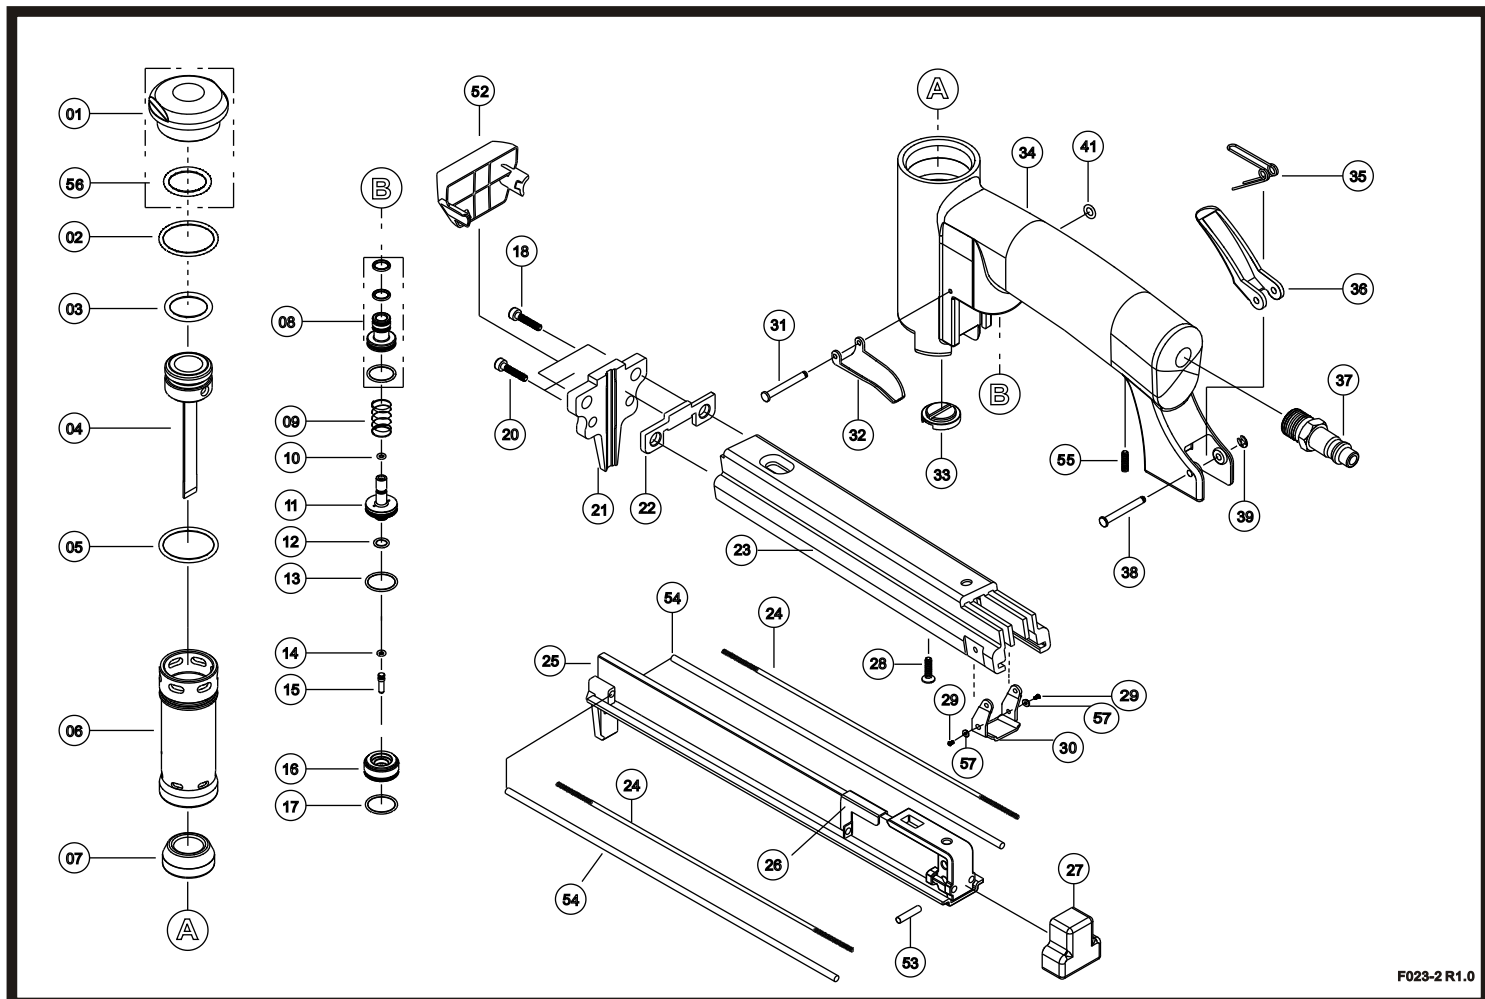

F023-2 R1.0

No.	Part NO.	Name	Pcs	No.	Part NO.	Name	Pcs
1	TH-P-FW10AD-18015	Hammer Cap	1	25	TH-P-FW10AD-23180	Magazine	1
2	TH-P-FW10AD-90000	O-Ring	1	26	TH-P-FW10AD-23190	Pusher	1
3	TH-P-FW10AD-90001	O-Ring ( Piston)	1	27	TH-P-FW10AD-18200	Rear Magazine Bumper	1
4	TH-P-FW10AD-23021-1	Piston Ram Assembly	1	28	TH-P-FW10AD-93001	Hex. Soc. FT HD Screw	1
5	TH-P-FW10AD-90000	O-Ring	1	29	TH-P-FW10AD-98002	Hex Soc Bolt Flat Head	2
6	TH-P-FW10AD-18030	Cylinder	1	30	TH-P-FW10AD-18213	Magazine Retainer	1
7	TH-P-FW10AD-18050	Bumper	1	31	TH-P-FW10AD-18220	Pin	1
8	TH-P-FW10AD-18060-1	Trigger Valve Kit	1	32	TH-P-FW10AD-18230	Trigger	1
9	TH-P-FW10AD-18070	Trigger Valve Spring	1	33	TH-P-FW10AD-18240	Seal	1
10	TH-P-FW10AD-90055	O-Ring	1	34	TH-P-FW10AD-18250	Gun Body	1
11	TH-P-FW10AD-18080	Trigger Valve	1	35	TH-P-FW10AD-18270	Magazine Latch Spring	1
12	TH-P-FW10AD-90005	O-Ring (Trigger Valve)	1	36	TH-P-FW10AD-18280	Magazine Latch	1
13	TH-P-FW10AD-90007	O-Ring (Trigger Valve)	1	37	TH-P-FW10AD-94001-1	Air Plug	1
14	TH-P-FW10AD-90009	O-Ring	1	38	TH-P-FW10AD-18292	Pin	1
15	TH-P-FW10AD-18100	Trigger Valve Stem	1	39	TH-P-FW10AD-95001	E-Ring	1
16	TH-P-FW10AD-18120	Trigger Valve Guide	1	41	TH-P-FW10AD-90010	O-Ring	1
17	TH-P-FW10AD-90007	O-Ring	1	52	TH-P-FW10AD-18330	Nose Cover	1
18	TH-P-FW10AD-91000-1	Hex.HD Soc Screw + Spring Washer	2	53	TH-P-FW10AD-23060	Pin	1
20	TH-P-FW10AD-91001	Hex.HD Soc Screw	2	54	TH-P-FW10AD-23050	Steel Bar	2
21	TH-P-FW10AD-23141	Nose	1	55	TH-P-FW10AD-99004	Blot	1
22	TH-P-FW10AD-15150	Nose Plate	1	56	TH-P-FW10AD-90087	O-Ring (Cap)	1
23	TH-P-FW10AD-23160	Magazine Cover	1	57	TH-P-FW10AD-92004	Spring Washer	2
24	TH-P-FW10AD-23172	Pusher Spring	2				